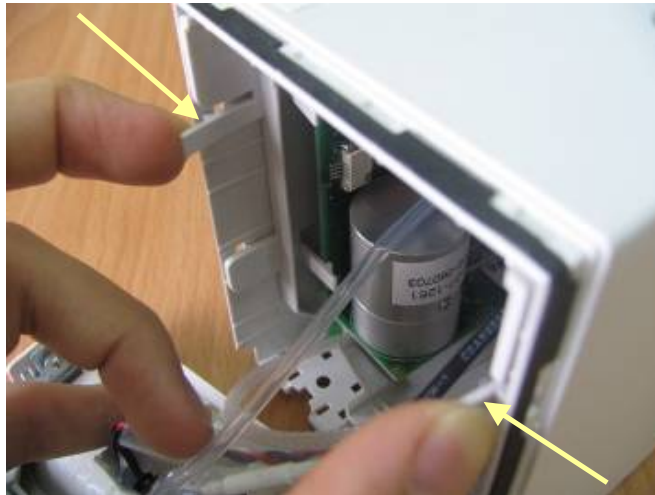

5.5.2 Disassembling CO₂ Module

1. Remove the four contact screws on the back and the two snap plates at the bottom and then unscrew the two M3×6 screws by referring to the procedure as described in **5.5.1 Disassembling the ICG Module**.



2. Remove the module's front panel by referring to the procedure as described in **5.5.1 Disassembling the ICG Module**. Then, press the two clips on the inner housing about 1mm inwards to separate the inner and outer housing. Then, take off the outer housing.





3. Hold the inner housing with both hands. Press the snap side with your thumb and push the other side with the index finger and the middle finger to separate the inner housing into two halves.

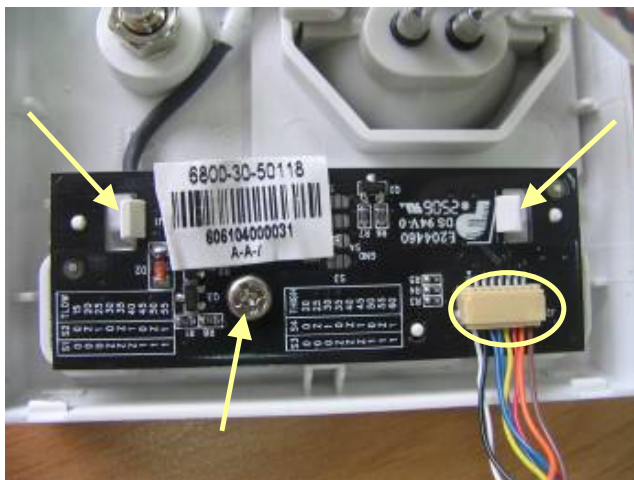




4. Remove the module infrared communication backboard and disconnect all the cables from it.



-
5. Disconnect the cables from the button board and unscrew the PT3×8 screw. Then release the two clips and take out the button board. After that, disconnect the cable to the fan and remove the button board.



-
6. Unscrew the two screws on the front panel. Disconnect the tubing between the watertrap assembly and CO₂ parameter board. Disconnect the cable between the watertrap and CO₂ parameter board. Then take out the watertrap connector assembly.



-
7. Disconnect the tubing between the CO₂ parameter board and the front panel. Then release the four clips and remove the CO₂ parameter board.



NOTE

- When reinstalling, do not fold the tubings.